

**ISOMAG** 

*The friendly magmeter*

## **DATA SHEET**

### **MV800**



**CE**

**ISOIL**   
INDUSTRIA

**INDEX**

<b>OVERALL FEATURES</b>	<b>2</b>
<b>STANDARD FEATURES</b>	<b>2</b>
<b>OPTIONAL FEATURES (CHECK HOW TO ORDER, AT LAST PAGE, FOR MORE DETAILS)</b>	<b>2</b>
<b>ACCURACY</b>	<b>2</b>
<b>TECHNICAL DATA</b>	<b>2</b>
<b>OVERALL DIMENSIONS WITH CONNECTOR</b>	<b>3</b>
<b>OVERALL DIMENSIONS WITH CABLE GLAND</b>	<b>4</b>
<b>MV800 EXPLODED LAYOUT</b>	<b>5</b>
<b>ELECTRICAL CONNECTIONS</b>	<b>6</b>
<b>INPUT/OUTPUTS: SCHEMATICS</b>	<b>7</b>
<b>USER INTERFACE</b>	<b>8</b>
<b>DISPLAY VISUALIZATION</b>	<b>9</b>
<b>AVAILABLE FUNCTIONS</b>	<b>10</b>
<b>ACCURACY TABLE</b>	<b>13</b>
<b>ACCURACY TABLE</b>	<b>13</b>
<b>HOW TO ORDER</b>	<b>14</b>

**TECHNICAL DATA****OVERALL FEATURES**

<b>Suitable For</b>	<input type="checkbox"/> MS1000-2500 up to ND 400
<b>Minimum conductivity</b>	<input type="checkbox"/> 20 $\mu$ S/cm
<b>Altitude</b>	<input type="checkbox"/> -200 m up to 2000 m
<b>Ambient Temperature</b>	<input type="checkbox"/> -20... +60°C / -4... +140 °F
<b>Humidity Range</b>	<input type="checkbox"/> 0÷100% (IP 67)

**STANDARD FEATURES**

<b>Housing materials</b>	<input type="checkbox"/> Painted Aluminium die casting
<b>Protection Rate</b>	<input type="checkbox"/> IP 67
<b>Power Supply/Consumption</b>	<input type="checkbox"/> 18-30V (1W)
<b>Electrical connections</b>	<input type="checkbox"/> 5 pins connector M12X1 complete of plug/Cable
<b>Full scale value</b>	<input type="checkbox"/> 0,4...10m/s
<b>Protocols</b>	<input type="checkbox"/> ETP
<b>Digital Input/Outputs</b>	<input type="checkbox"/> N° 1 channel freely programmable as INPUT or OUTPUT for volume pulses/alarms
<b>Data Storage</b>	<input type="checkbox"/> Eeprom values storing system in case of power failure
<b>Programming Plug In</b>	<input type="checkbox"/> Protected plug in for the connection to PC
<b>Bi-Directional</b>	<input type="checkbox"/> Yes
<b>CE Certification</b>	<input type="checkbox"/> Yes






**OPTIONAL FEATURES (CHECK HOW TO ORDER, AT LAST PAGE, FOR MORE DETAILS)**

<b>Housing materials</b>	<input type="checkbox"/> Housing in AISI 304 JB RAW/POLISHED
<b>Pulses/ Alarm Outputs</b>	<input type="checkbox"/> N°1 Digital Output
<b>Current Output</b>	<input type="checkbox"/> N°1 , 0/4...20mA – RL=1000






**ACCURACY**

<b>Measurements tolerance (board)</b>	<input type="checkbox"/> Volume = $\pm 0,2\%$ v.l. <input type="checkbox"/> Out 4/20 mA = $\pm 0,2\%$ v.l.
<b>Accuracy (whole system converter+sensor)</b>	<input type="checkbox"/> See table below

OVERALL DIMENSIONS WITH CONNECTOR

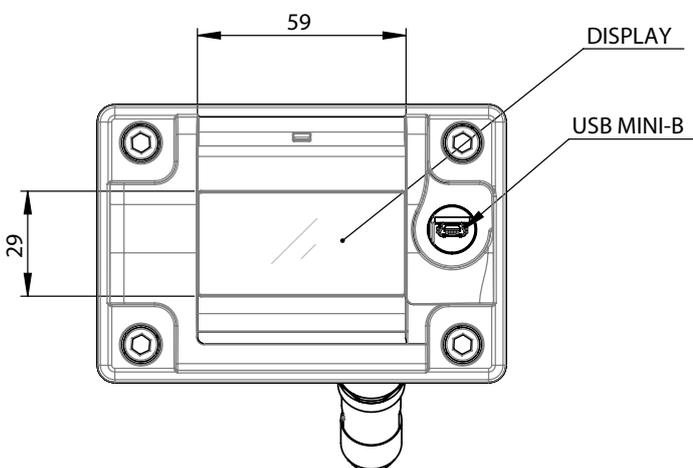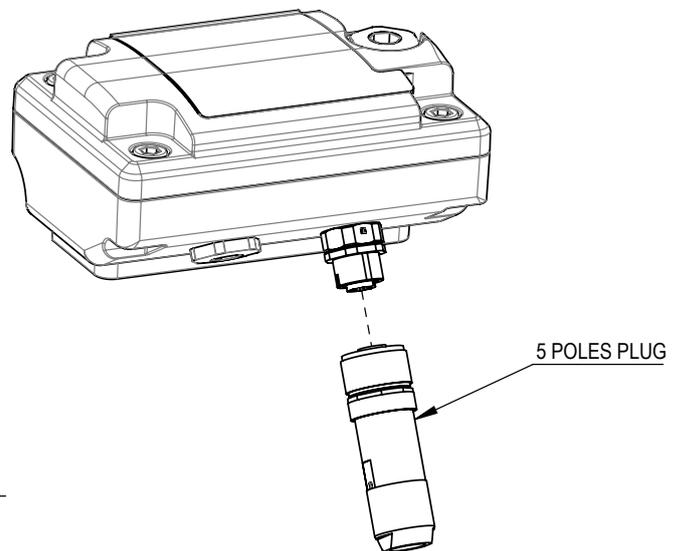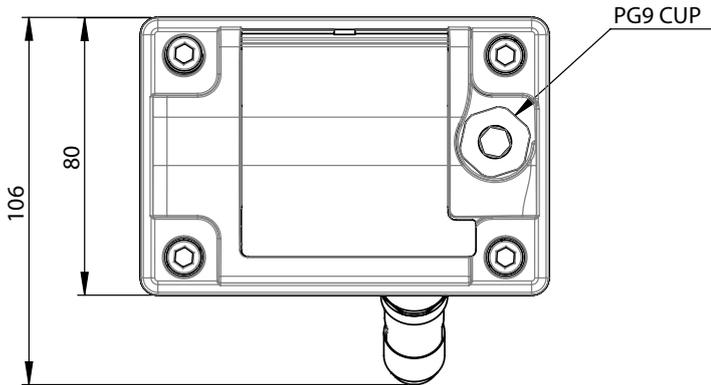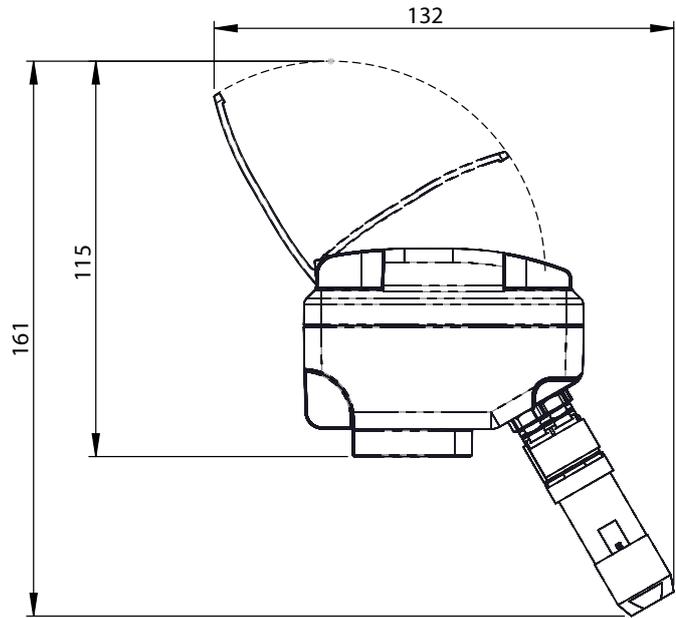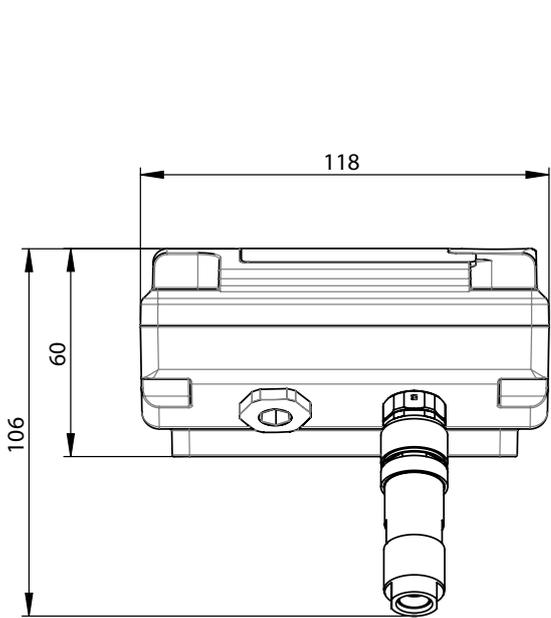


OVERALL DIMENSIONS WITH CABLE GLAND

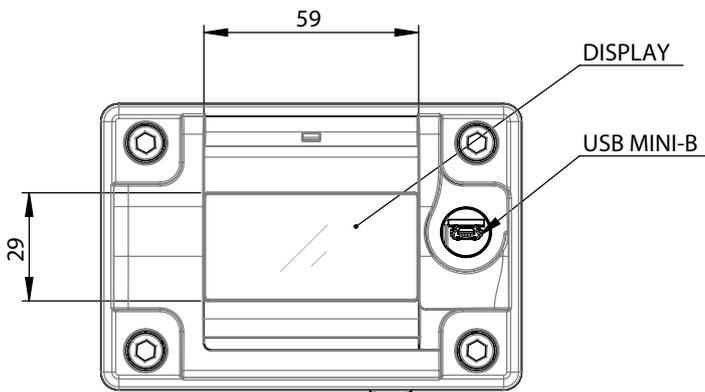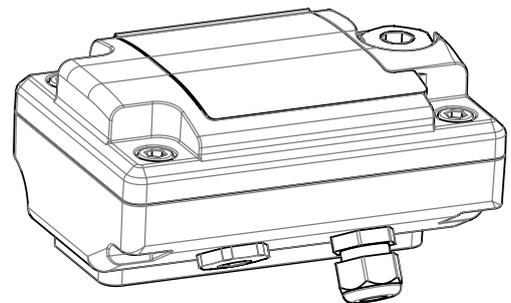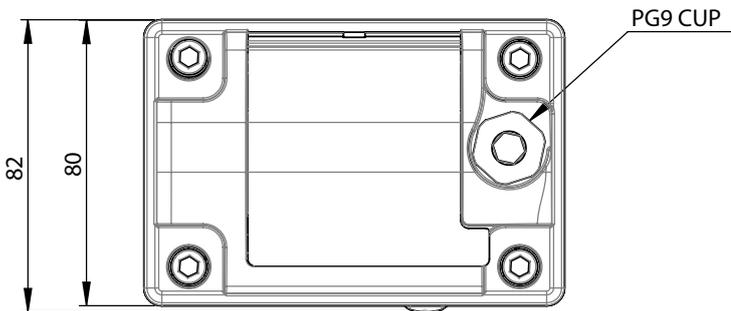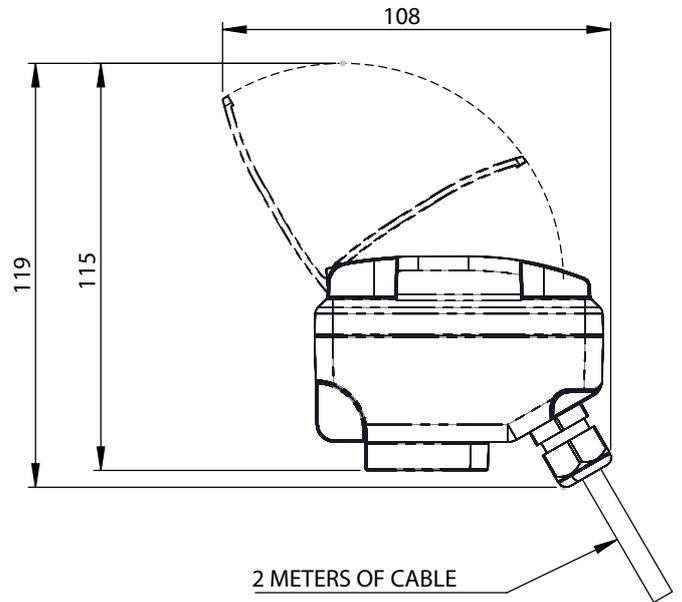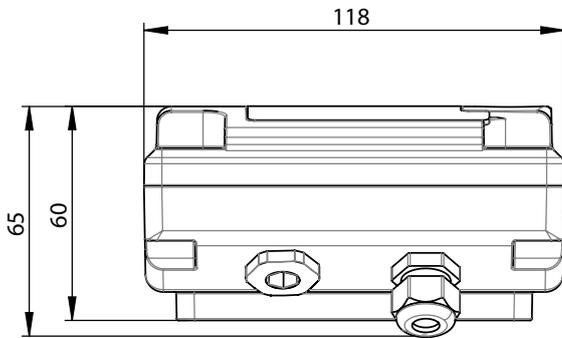

The manufacturer guarantees only English text available on our web site www.isoil.com

**MV800 EXPLODED LAYOUT**

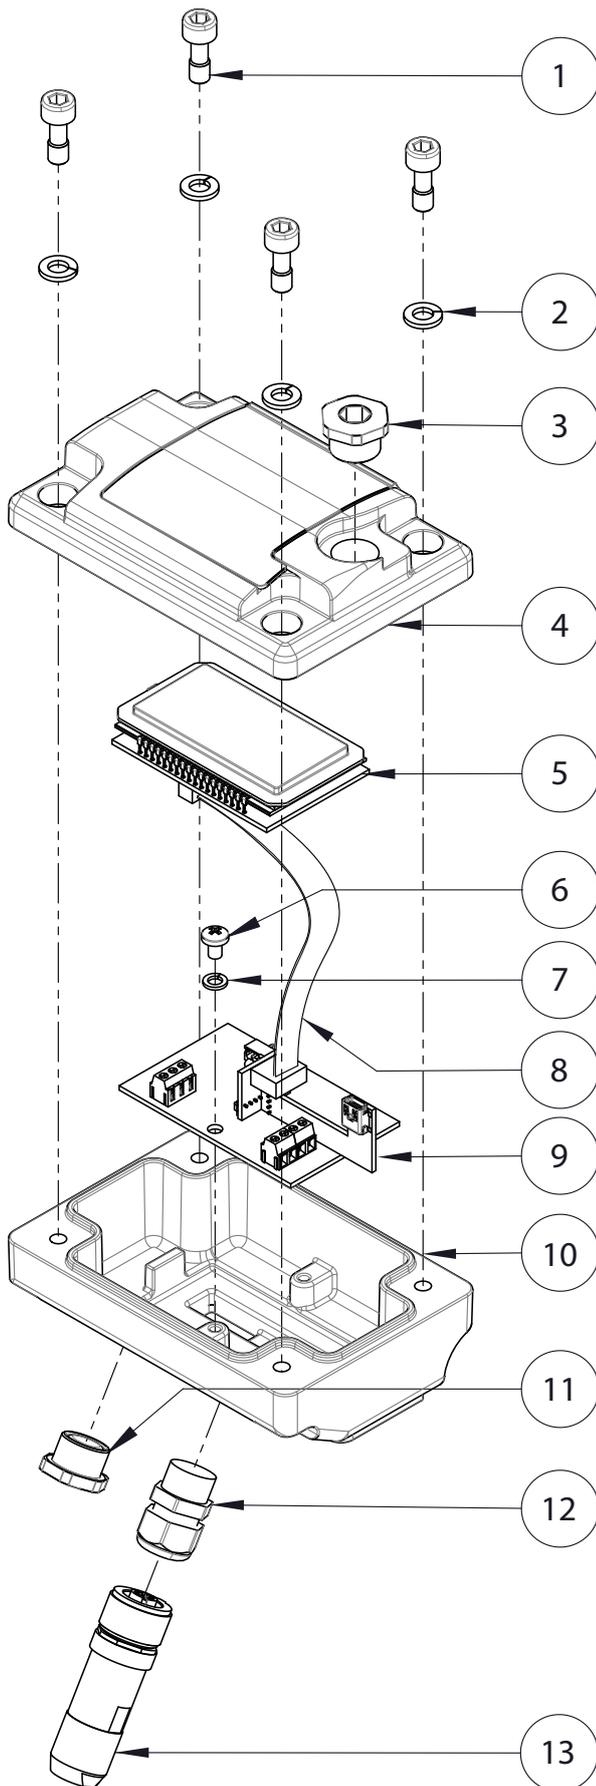


POS.	DESCRIPTION
<b>1</b>	SCREWS M6x16
<b>2</b>	GROWERS Ø6
<b>3</b>	PG9 CUP
<b>4</b>	COVER PA06
<b>5</b>	DISPLAY
<b>6</b>	SCREWS M4x6 TC
<b>7</b>	GROWERS Ø 4
<b>8</b>	FLAT CABLE
<b>9</b>	MV800 PCB
<b>10</b>	HOUSING IN PA06/AISI 304 JB RAW OR POLISHED
<b>11</b>	PG9 CUP
<b>12</b>	CABLE GLANDS + CABLE OR
<b>13</b>	5 POLES CONNECTOR COMPLETE OF PLUG


The manufacturer guarantees only English text available on our web site [www.isomag.com](http://www.isomag.com)

## ELECTRICAL CONNECTIONS


### VERSION WITH CABLE

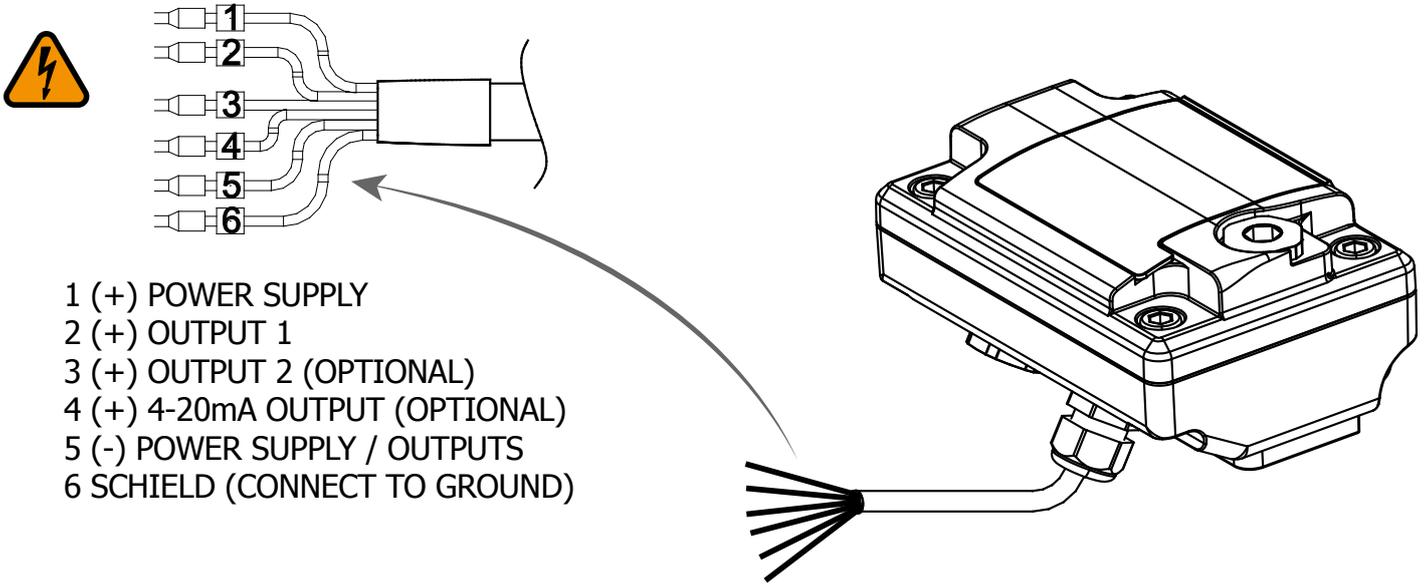


### VERSION WITH CONNECTOR

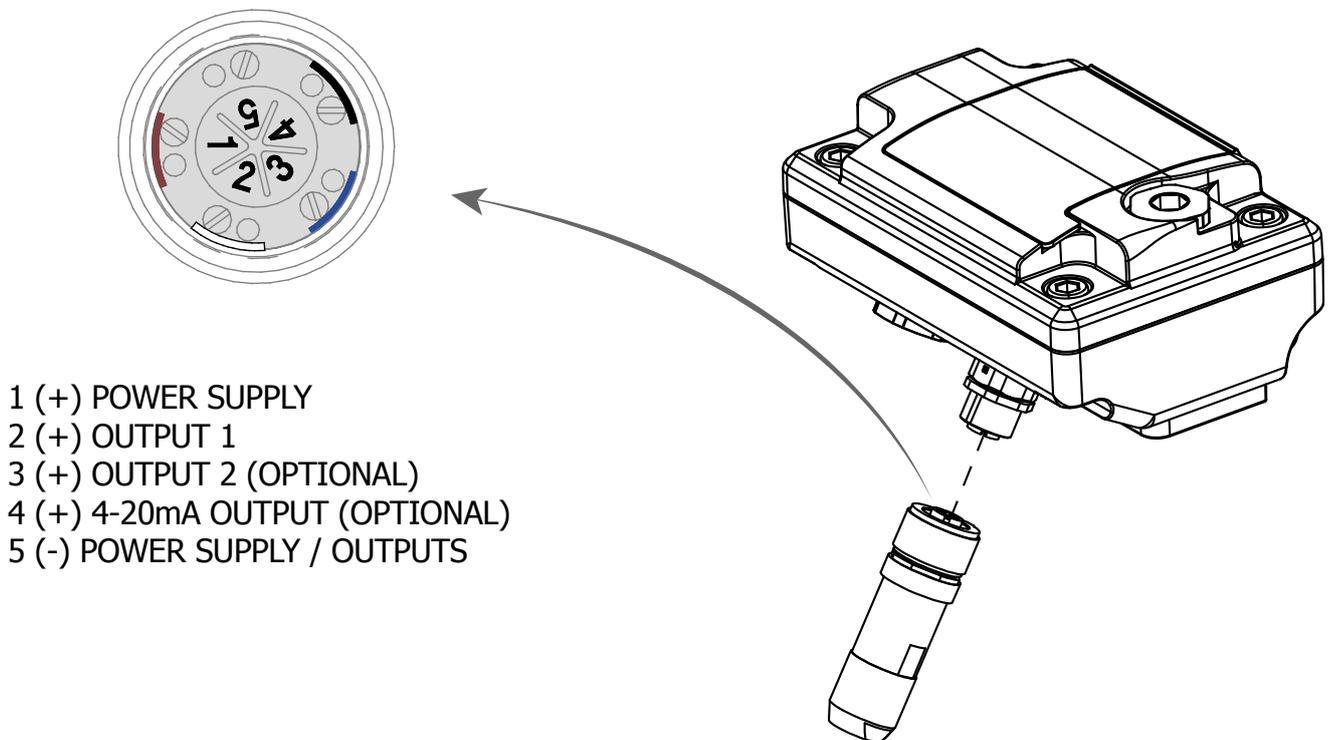

**INPUT/OUTPUTS: SCHEMATICS**

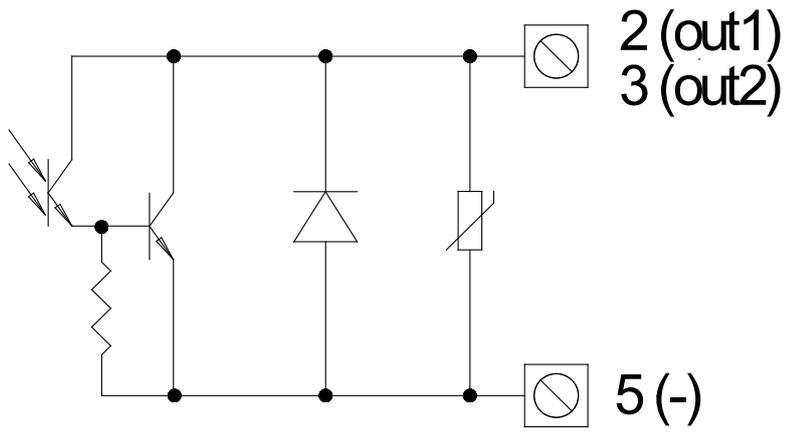

DIGITAL OUTPUTS

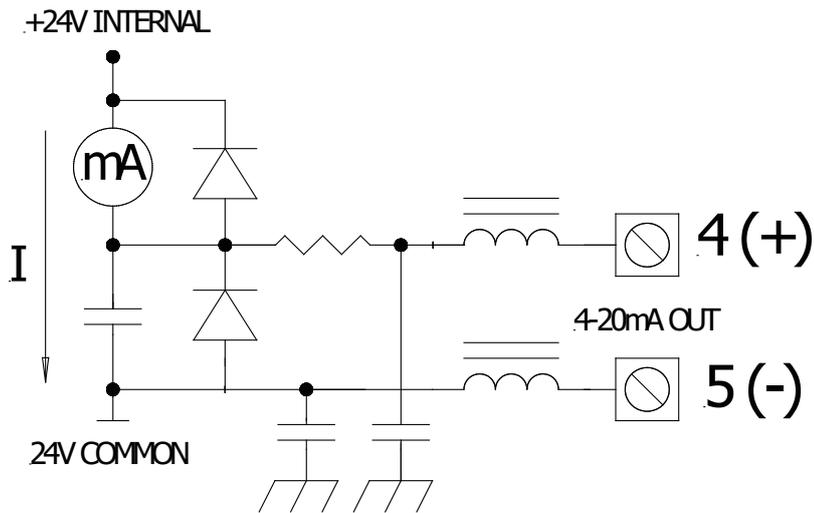


ANALOG OUTPUT

The manufacturer guarantees only English text available on our web site www.isoil.com


## USER INTERFACE

MCP is a Windows® software that allows to set all the converter functions and personalize the menu. To use MCP interface consult the relevant user manual.

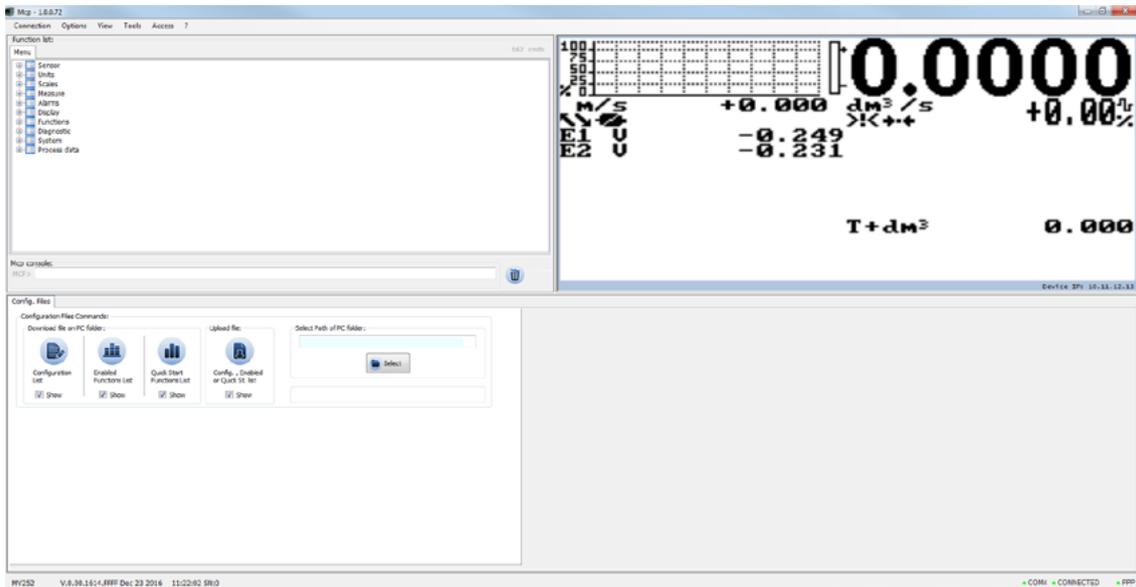


To connect the converter to the computer, connect the USB cable as shown below.


Remove the PG9 cup.

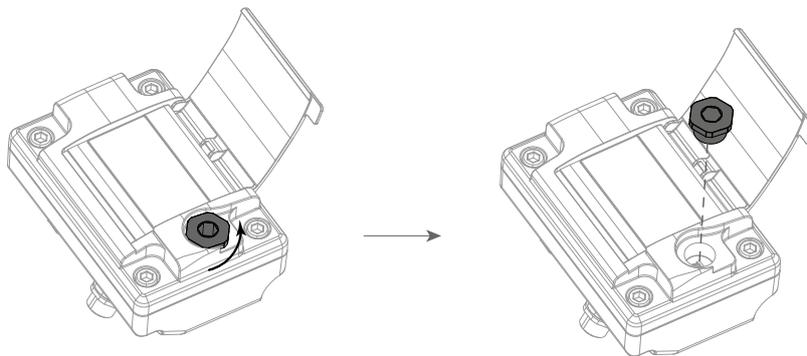

Connect USB cable type mini B. Verify connection by symbol on display

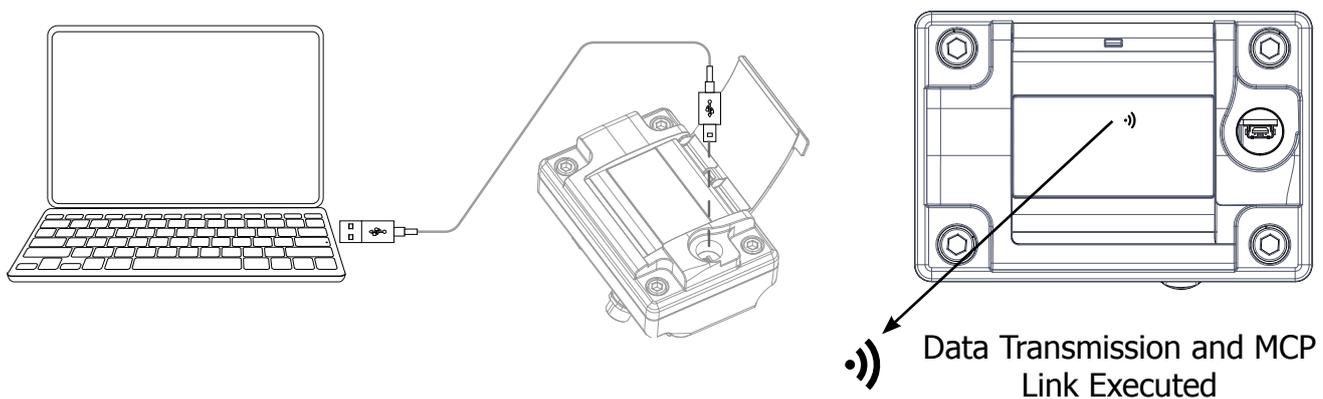

**DISPLAY VISUALIZATION**

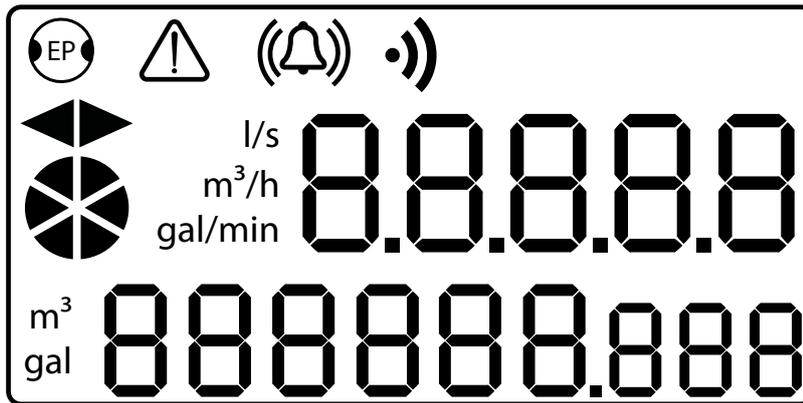

EMPTY PIPE WARNING



ALARM WARNING



XXXXXXXXXXXXXXXXXX



DATA TRASMISSION



FLOW DIRECTION



ACTIVE FLOW RATE

l/s  
m<sup>3</sup>/h  
gal/min

FLOW RATE MEASURE UNIT

m<sup>3</sup>  
gal

TOTALIZER MEASURE UNIT

NOTE: the measure units available, are these as shown on the display here above

## AVAILABLE FUNCTIONS

```

MAIN MENU
1-Sensor
SENSOR
S.model= 002
Lining= UNSPEC.
S.type= FULL BORE
U.type= METRIC
Diam.=MM 700
KA= +04.4904
KZ= -0018852
KD= +00.4014
Ins.position= 0
KP dynamic= OFF
Ki= +01.0000
Kp= +01.0000
KC= 1.00000
C.Curr.=mA 025.0
C.Reg.PB= 007
C.Reg.DK= 013
S.Freq.=Hz 50
E.P.Detect= ON
Z max=kohm 0500
S.err.delay= 010
Sens.verify= OFF
Zero point cal.
    
```

- 1.1 Sensors model: Enter the first two characters of the serial number of the sensor
- 1.2 Flow sensor lining material type
- 1.3 Type of sensor: fullbore or insertion
- 1.4 Type of measure units for sensor parameter: metric or imperial
- 1.5 Insert ND of sensor (0-2500)
- 1.6 Calibration data of sensor visualized on sensor's label
- 1.7 Sensor coefficient KZ (zero point)
- 1.8 Sensor coefficient KD (zero point)
- 1.9 Insertion position
- 1.10 KP dynamic, coefficient for insertion
- 1.11 Sensor coefficient Ki
- 1.12 Sensor coefficient Kp
- 1.13 Sensor coefficient KC
- 1.14 Sensor excitation current
- 1.15 Current regulator proportional band
- 1.16 Current regulator derivation constant
- 1.17 Measure sampling frequency
- 1.18 Enables the empty pipe detection feature
- 1.19 Empty pipe detection threshold
- 1.20 Signal error delay (n. sample)
- 1.21 Automatic sensor verify enable
- 1.22 Pipe hydraulic zero calibration

```

MAIN MENU
1-Sensor
2-Units
UNITS
DIAM.= MM
FR.unit= METRIC
P11 unit= METRIC
P12 unit= METRIC
T+ unit= METRIC
T+ unit= g
P+ unit= METRIC
P+ unit= g
T- unit= METRIC
T- unit= g
P- unit= METRIC
P- unit= g
Temp.unit= °C
Mass units= ON
Sg=kg/dm³ 1.0000
    
```

- 2.1 Nominal diameter measure unit
- 2.2 Flowrate type measure unit: metric or imperial
- 2.3 Pulse 1 type measure unit: metric or not metric
- 2.4 Pulse 2 type measure unit: metric or not metric
- 2.5 Total direct totalizer measure unit type: metric or imperial
- 2.6 Total direct totalizer measure unit
- 2.7 Partial direct totalizer measure unit type: metric or not metric
- 2.8 Partial direct totalizer measure unit
- 2.9 Total reverse totalizer measure unit type: metric or not metric
- 2.10 Total reverse totalizer measure unit
- 2.11 Partial reverse totalizer measure unit type: metric or not metric
- 2.12 Partial reverse totalizer measure unit
- 2.13 Temperature measure unit
- 2.14 Enable/disable the selection of mass units on full scale set
- 2.15 Specific gravity coefficient

```

MAIN MENU
1-Sensor
2-Units
3-Scales
SCALES
FS1= m³/s 3920.0
FS2= ml/s 00.00
Pls1=dm³ 1.00000
Tpls1=ms 0000.4
Pls2=dm³ 1.00000
Tpls2=ms 0050.0
Frq1=Hz 1000.0
Frq2=Hz 1000.0
    
```

- 3.1 Full scale flow rate 1
- 3.2 Full scale flow rate 2
- 3.3 Pulse value on channel 1
- 3.4 Duration of the pulse generated on channel 1
- 3.5 Pulse value on channel 2
- 3.6 Duration of the pulse generated on channel 2
- 3.7 Full scale frequency for channel 1 (0.1Hz-1000.0Hz)
- 3.8 Full scale frequency for channel 2 (0.1Hz-1000.0Hz)

```

MAIN MENU
1-Sensor
2-Units
3-Scales
4-Measure

```

```

MEASURE
Damping= SWAN
Cut-off=% 00.1
Cal.verify= ON
Autorange= ON

```

- 4.1 Measure filter
- 4.2 Low flow zero threshold: 0-25% of full scale value
- 4.3 Automatic calibration verify
- 4.4 Automatic change of measurement range

```

MAIN MENU
1-Sensor
2-Units
3-Scales
4-Measure
5-ALARMS

```

```

ALARMS
Max.thr+=% 000
Max.thr-=% 000
Min.thr+=% 000
Min.thr-=% 000
Hysteresis=% 03
mA v.alarm=% 000
Hz v.alarm=% 000

```

- 5.1 Maximum value alarm set for direct flow rate
- 5.2 Maximum value alarm set for reverse flow rate
- 5.3 Minimum value alarm set for direct flow rate
- 5.4 Minimum value alarm set for reverse flow rate
- 5.5 Hysteresis threshold set for the minimum and maximum flow rate alarms
- 5.6 Current output value in case of failure
- 5.7 Frequency output value in case of alarms

```

MAIN MENU
1-Sensor
2-Units
3-Scales
4-Measure
5-ALARMS
7-Outputs

```

```

OUTPUTS
Out1= PULSES+
Out2= PULSES-
Out mA1=4.22 +/-
A1S= 1/s 4.9087

```

- 7.1 Output 1 functions
- 7.2 Output 2 functions
- 7.3 Choice of the function and the range of current output n.1
- 7.4 Full Scale value for analog out1

```

DISPLAY
Language= EN
Contrast= 5
D.rate=Hz 5
D.item= IN
Part.tot.= ON
Neg.tot.= ON
Net.tot.= ON
Quick.start= ON

```

- 9.1 Choice of the language: E= English, I=italian
- 9.2 Display contrast
- 9.3 Display updating frequency: 1-2-5-10 Hz
- 9.4 Display item choice
- 9.5 Partial totalizer enable
- 9.6 Negative totalizer enable
- 9.7 Net totalizer enable
- 9.8 Quick start menu visualization

```

9-Display
11-Functions
12-Diagnostic
13-System

```

```

FUNCTIONS
L1 reset
P+ reset
T- reset
P- reset
Load Sens.f.def
Load Conv.f.def
Save Sens.f.def
Save Conv.f.def
Calibration
11-Functions
12-Diagnostic
13-System
    
```

- 11.1 Execute immediate reset of total direct totalizer
- 11.2 Execute immediate reset of partial direct totalizer
- 11.3 Execute immediate reset of total reverse totalizer
- 11.4 Execute immediate reset of partial reverse totalizer
- 11.5 Load sensor factory default
- 11.6 Load converter factory default
- 11.7 Save sensor factory default values
- 11.8 Save converter factory default values
- 11.9 Execute immediate internal circuit calibration

```

DIAGNOSTIC
Self test
Sens.verify
Flow sim.= ON
Display measures
Disp.comm.vars
Firmware info
S/N= 999001
WT=0002:21:00:22
12-Diagnostic
13-System
    
```


- 12.1 Self test diagnostic function
- 12.2 Sensor verify diagnostic function
- 12.3 Flow rate simulation enabling
- 12.4 Display internal measured value
- 12.5 Display comm. diagnostic values
- 12.6 Firmware version/revision
- 12.7 Board serial number
- 12.8 Total working time

```

SYSTEM
L1 code=*****
L2 code=*****
L3 code=*****
L4 code=*****
L5 code=*****
L6 code=*****
Restr.access= ON
010.011.012.013
010.011.012.014
255.255.255.000
KT= 0.96469
KS= 1.00000
KR= 1.00000
DAC1 4mA= 02460
DAC1 20mA= 11050
Stand-by
FW update
13-System
    
```

- 13.1 Access level 1 code
- 13.2 Access level 2 code
- 13.3 Access level 3 code
- 13.4 Access level 4 code
- 13.5 Access level 5 code
- 13.6 Access level 6 code
- 13.7 Restricted access level
- 13.8 Device IP network address
- 13.9 Client IP network address
- 13.10 Network mask
- 13.11 Calibration coefficient KT
- 13.12 Calibration coefficient KS
- 13.13 Calibration coefficient KR
- 13.14 DAC1 out 4mA calibration point
- 13.15 DAC1 out 20mA calibration point
- 13.16 Stand-by
- 13.17 firmware update

**ACCURACY TABLE**

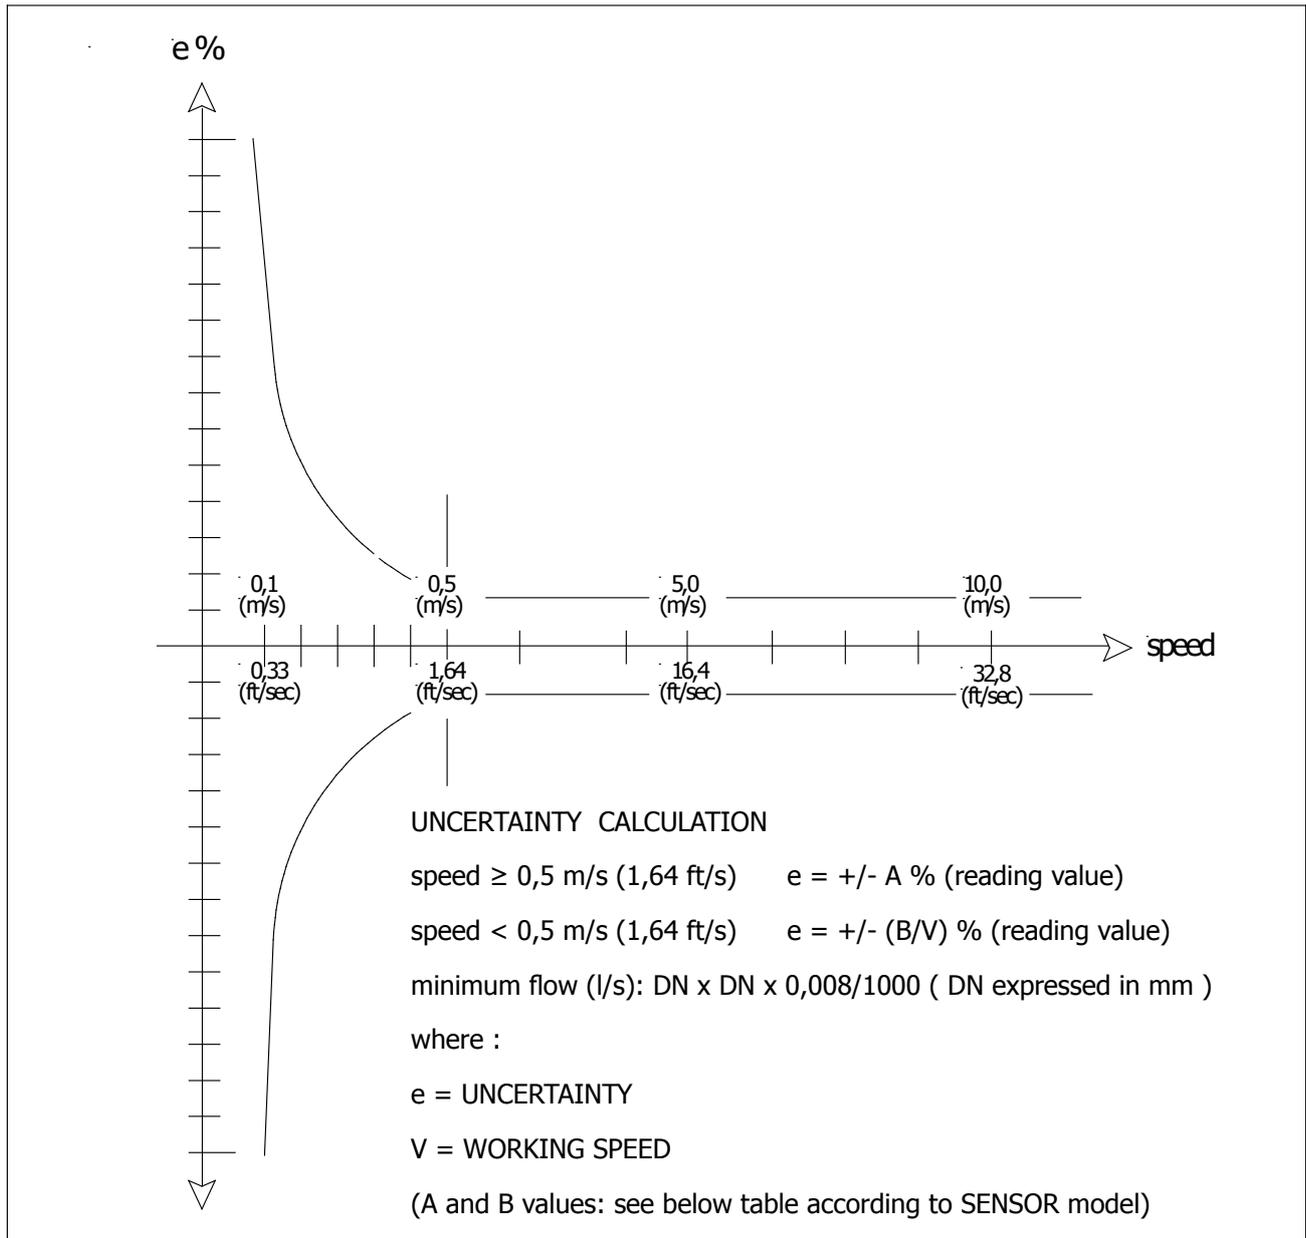

**ACCURACY TABLE**

MS1000/MS2500		
A	B(m/s)	B(ft/s)
0,5	0,25	0,82

Reference conditions below and as per internal testing procedures:

- Constant flow rate during the test
- Pressure: >30 Kpa
- Flow condition : fully developed flow profile
- Zero stability +/- 0,005 %

## HOW TO ORDER

CODE EXAMPLE	MV 800	
A	A	MV800 - Blind, N°1 freely programmable digital OUT
	B	MV800 - Complete of DISPLAY LCD and N°1 freely programmable digital OUT
<b>Housing material / Protection rate</b>		
0	0	Housing in painted alluminum (with PA6 plastic cover for version with display)
	1	Housing in AISI 304 JB RAW (with PA6 plastic cover for version with display)
	2	Housing in AISI 304 JB POLISCHED (with PA6 plastic cover for version with display)
<b>DIGITAL Output</b>		
A	A	Without Additional Digital Out
	B	N° 1 additional digital out
<b>ANALOG Output</b>		
0	0	Without Analog Out
	1	With Analog Out
<b>Electrical Connections</b>		
A	A	5 poles connector complete of plug
	B	2 meters of N° 5 poles cable ALREADY CONNECTED
<b>Special Features</b>		
0	0	NONE



**MV800-A0A0A0** (Complete code example for order)

## ISOIL INDUSTRIA S.p.A.

HEAD OFFICE	SERVICE
Via Fratelli Gracchi, 27 20092 Cinisello Balsamo (MI) Tel +39 02 66027.1 Fax +39 02 6123202 vendite@isoil.it	isomagservice@isoil.it

If you want to find the complete list of our distributors access at the following link:  
[http://www.isoil.com/u\\_vendita.asp](http://www.isoil.com/u_vendita.asp)



Due to the constant technical development and improvement of its products, the manufacturer reserves the right to make changes and/or modify the information contained in this document without notice.